

Switch Panel connections

Pin DB25	PIN OUT	TIPO	NOTE
1	GND	GND	
2	BATT ON	SW	
3	APU	SW	
4	GEN	SW	
5	NAV L.	SW	
6	BEACON L.	SW	
7	ANTI INCE	SW	
8	LANDING L.	SW	
9	TAXI L.	SW	
10	AVIONICS	SW	
11	RADIO	SW	
12	PANEL L.	SW	
13	CABIN L	SW	
14	STROBE L.	SW	
15	FUEL PUMP	SW	
16	TANK OFF	SEL.1	
17	TANK LEFT	SEL.1	
18	TANK CENTER	SEL.1	
19	TANK RIGHT	SEL.1	
20	TANK BOTH	SEL.1	
21	ENGINE AUTO OFF	SEL.2	
22	ENGINE NORMAL	SEL.2	
23	ENGINE AUTO START	SEL.2	
24	NC		
25	NC		

Simulatore Volo FS1

Ver 1.0b

Created By

Ceresoli Alberto